




THEGREENBOW

 **TheGreenBow IPsec VPN Client**
Configuration Guide
PLANET VRT-311S
Firmware v1.0 release 10

WebSite: <http://www.thegreenbow.com>

Contact: support@thegreenbow.com



Table of contents

1	Introduction	3
1.1	Goal of this document	3
1.2	VPN Network topology	3
2	VRT-311S VPN configuration	Error! Bookmark not defined.
3	TheGreenBow IPSec VPN Client configuration	6
3.1	VPN client Phase 1 configuration	6
3.2	VPN client Phase 2 configuration	7
4	VPN IPSec Troubleshooting	9
4.1	« PAYLOAD MALFORMED » error	9
4.2	« INVALID COOKIE » error	9
4.3	« no keystate » error	9
4.4	« received remote ID other than expected » error	9
4.5	« NO PROPOSAL CHOSEN » error	10
4.6	« INVALID ID INFORMATION » error	10
4.7	I clicked on "Open tunnel", but nothing happens	10
4.8	The VPN tunnel is up but I can't ping !	100
5	Contacts	12

1. Introduction

1.1 Goal of this document

This configuration guide describes how to configure TheGreenBow IPsec VPN Client with a Planet VRT-311S firmware v1.0 release 10.




1.2 VPN Network topology

In our VPN network example (diagram hereafter), we will connect TheGreenBow IPsec VPN Client to the LAN behind the VRT-311S. The VPN client is connected to the Internet with a DSL connection or through a LAN. All the addresses in this document are given for example purpose.

A Road Warrior connection also needs to be configured. The following example makes use of these values:

- External IP of the VRT-311S: `yourgateway.dyndns.org` (or public IP address)
- IP Subnet behind the VRT-311S: `192.168.0.0/255.255.255.0`

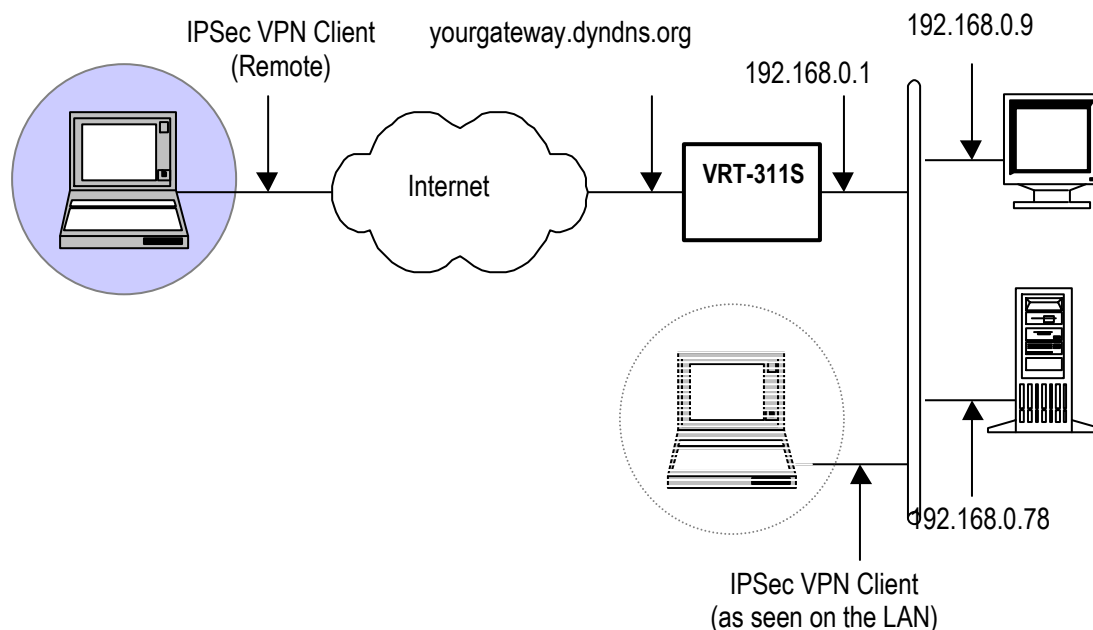

2 VRT-311S VPN configuration

On the router menu, go to VPN policies, and configure a new policy definition :

VPN Policy Definition

Name: Enable Policy
 Allow NetBIOS traffic

Remote VPN endpoint Dynamic IP
 Fixed IP: ...
 Domain Name:

Local IP addresses
 Type: IP address: ... ~
 Subnet Mask: ...

Remote IP addresses
 Type: IP address: ... ~
 Subnet Mask: ...

Authentication & Encryption
 AH Authentication
 ESP Encryption Key Size: (AES only)
 ESP Authentication
 Manual Key Exchange
 IKE (Internet Key Exchange)

Direction:
 Local Identity Type:
 Local Identity Data:
 Remote Identity Type:
 Remote Identity Data:
 Authentication: RSA Signature (requires certificate)
 Pre-shared Key

 Authentication Algorithm:
 Encryption: Key Size: (AES only)
 Exchange Mode:
 IKE SA Life Time: (secs)
 IKE Keep Alive Ping IP Address: ...
 IPsec SA Life Time: (secs)
 DH Group:
 IKE PFS:
 IPsec PFS:

AES algorithm is more efficient than DES or 3DES (faster to cipher data and more secured), but any other algorithm can be used.

Aggressive mode is selected automatically on the router for a roadwarrior access. PFS must not be used with aggressive mode on this router. We chose DNS as local and remote ID type, but any type can be selected.

We used preshared key authentication as the VRT-311S doesn't include a build in Certification Authority. If you wish to use certificates, a third party CA is needed and IDs type have to be set to DER_ASN1_DN.

3 TheGreenBow IPsec VPN Client configuration


3.1 VPN Client Phase 1 Configuration

Right click on Configuration in **TheGreenbow** VPN client and select “**Add Phase 1**”.

Then select the "new phase 1" screen. The values that need to be changed and entered are displayed here:

The preshared key used in this example is intentionally short. Don't use this key length in a production environment, it must be complex enough for maximum security.

Phase 1 Configuration

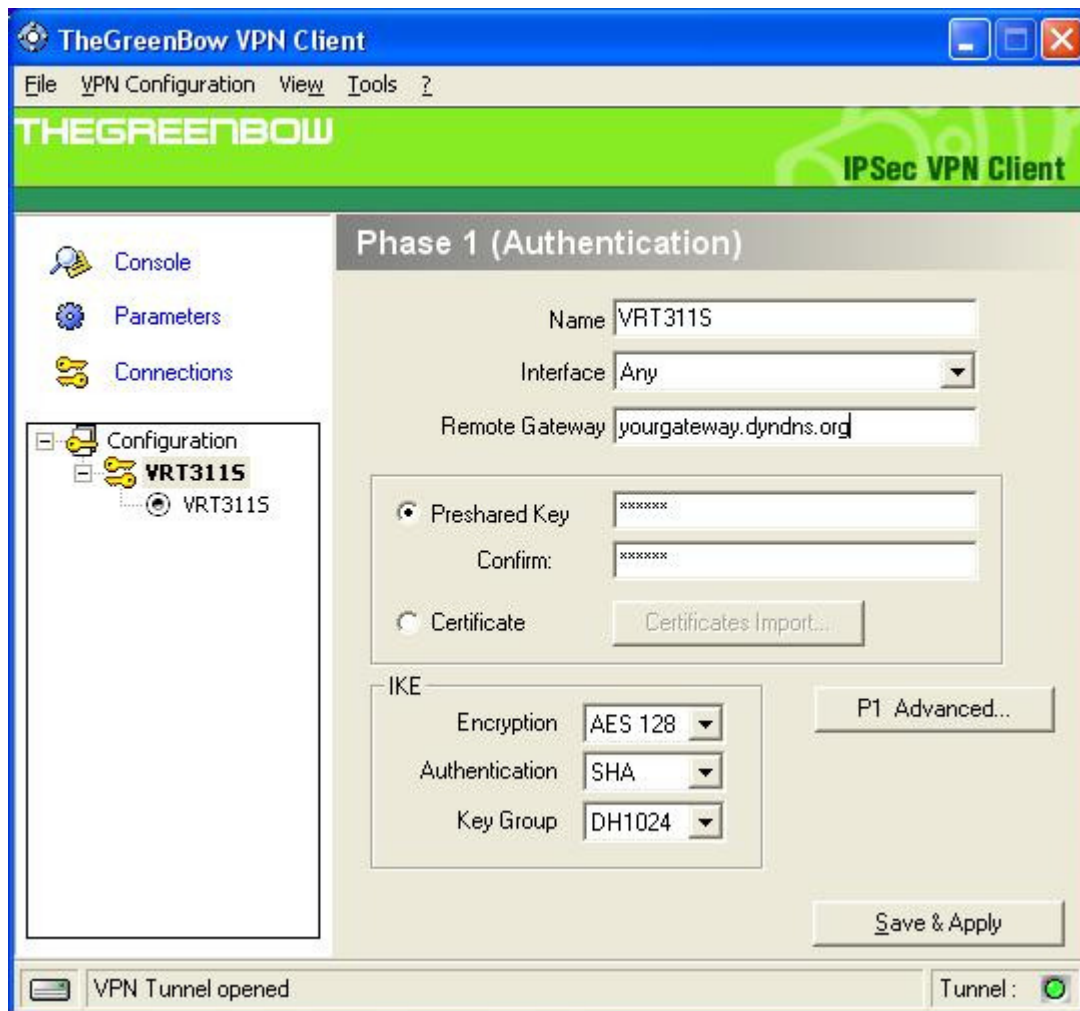

Click on “P1 advanced” to select aggressive mode and enter ID types and values.

Phase1 Advanced

Advanced features

Config Mode Redund.GW

Aggressive Mode NAT-T

X-Auth

X-Auth Popup Login

 Password


Local and Remote ID

 Choose the type of ID: Set the value for the ID:

Local ID

Remote ID

3.2 VPN Client Phase 2 Configuration

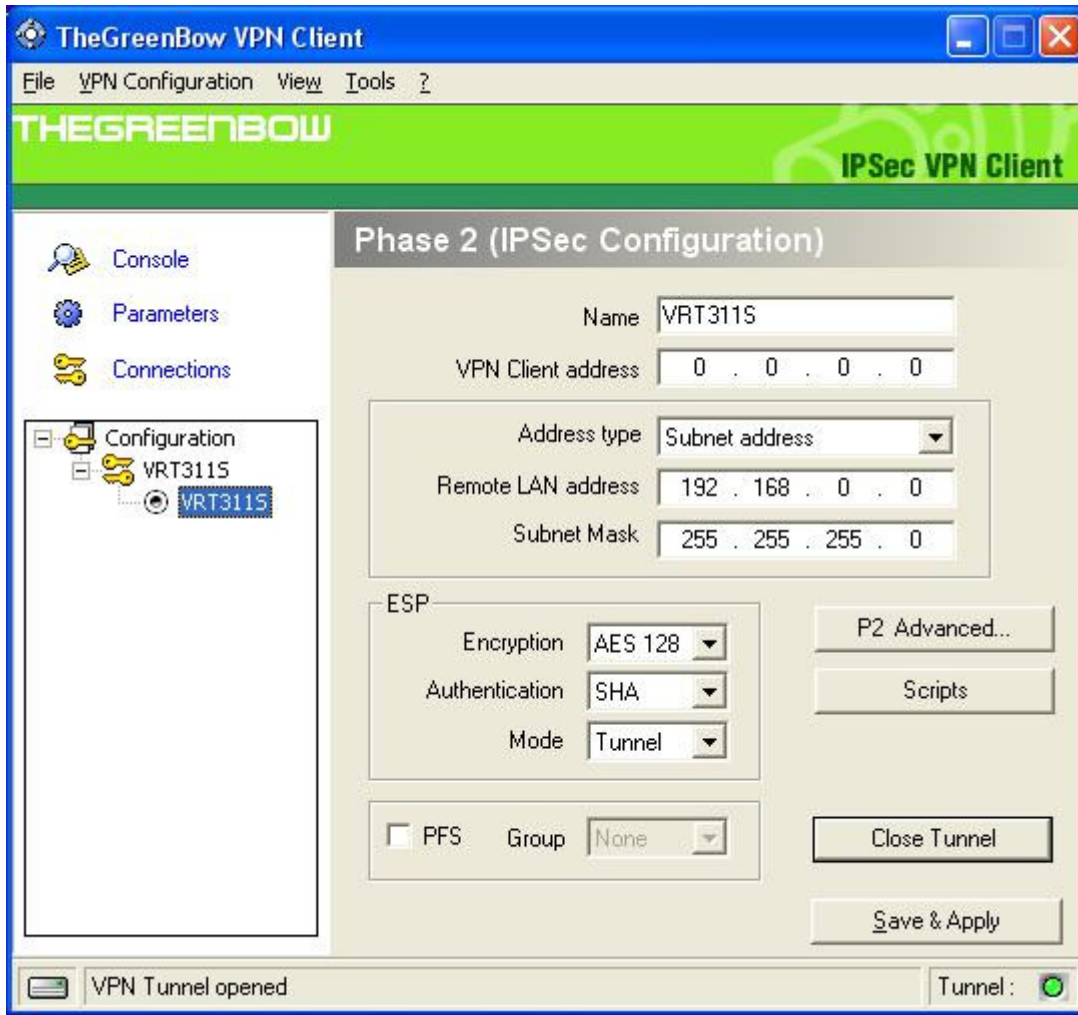

0.0.0.0 in "VPN client address" means the ip used for the vpn client is the current one on the pc's network adapter.

Phase2 advanced is used to enter alternate dns and/or wins servers addresses .If configured, these addresses will overwrite the current dns and/or wins configuration on the ip stack, once the tunnel is up. The ip stack return to its original state at tunnel normal closure.

4 VPN IPSec Troubleshooting

4.1 « PAYLOAD MALFORMED » error

```

114920 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
114920 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [NOTIFY]
114920 Default exchange_run: exchange_validate failed
114920 Default dropped message from 195.100.205.114 port 500 due to notification
type PAYLOAD_MALFORMED
114920 Default SEND Informational [NOTIFY] with PAYLOAD_MALFORMED error
    
```

If you have an « PAYLOAD MALFORMED » error you might have a wrong Phase 1 [SA], check if the encryption algorithms are the same on each side of the VPN tunnel.

4.2 « INVALID COOKIE » error

```

115933 Default message_rcv: invalid cookie(s) 5918ca0c2634288f 7364e3e486e49105
115933 Default dropped message from 195.100.205.114 port 500 due to notification
type INVALID_COOKIE
115933 Default SEND Informational [NOTIFY] with INVALID_COOKIE error
    
```

If you have an « INVALID COOKIE » error, it means that one of the endpoint is using a SA that is no more in use. Reset the VPN connection on each side.

4.3 « no keystate » error

```

115315 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
115317 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [SA][VID]
115317 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [KEY][NONCE]
115319 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [KEY][NONCE]
115319 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
115319 Default ipsec_get_keystate: no keystate in ISAKMP SA 00B57C50
    
```

Check if the preshared key is correct or if the local ID is correct (see « Advanced » button). You should have more information in the remote endpoint logs.

4.4 « received remote ID other than expected » error

```

120348 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
120349 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [SA][VID]
120349 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [KEY][NONCE]
120351 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [KEY][NONCE]
120351 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
120351 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [ID][HASH][NOTIFY]
120351 Default ike_phase_1_rcv_ID: received remote ID other than expected
    
```

The « Remote ID » value (see « Advanced » Button) does not match what the remote endpoint is expected.

4.5 « NO PROPOSAL CHOSEN » error

```

115911 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA] [VID]
115913 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [SA] [VID]
115913 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [KEY] [NONCE]
115915 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [KEY] [NONCE]
115915 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [ID] [HASH] [NOTIFY]
115915 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [ID] [HASH] [NOTIFY]
115915 Default phase 1 done: initiator id c364cd70: 195.100.205.112, responder id
c364cd72: 195.100.205.114, src: 195.100.205.112 dst: 195.100.205.114
115915 Default (SA CNXVPN1-CNXVPN1-P2) SEND phase 2 Quick Mode
[SA] [KEY] [ID] [HASH] [NONCE]
115915 Default RECV Informational [HASH] [NOTIFY] with NO_PROPOSAL_CHOSEN error
115915 Default RECV Informational [HASH] [DEL]
115915 Default CNXVPN1-P1 deleted
    
```

If you have an « NO PROPOSAL CHOSEN » error, check that the « Phase 2 » encryption algorithms are the same on each side of the VPN Tunnel.

Check « Phase 1 » algorithms if you have this:

```

115911 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA] [VID]
115911 Default RECV Informational [NOTIFY] with NO_PROPOSAL_CHOSEN error
    
```

4.6 « INVALID ID INFORMATION » error

```

122623 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA] [VID]
122625 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [SA] [VID]
122625 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [KEY] [NONCE]
122626 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [KEY] [NONCE]
122626 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [ID] [HASH] [NOTIFY]
122626 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [ID] [HASH] [NOTIFY]
122626 Default phase 1 done: initiator id c364cd70: 195.100.205.112, responder id
c364cd72: 195.100.205.114, src: 195.100.205.112 dst: 195.100.205.114
122626 Default (SA CNXVPN1-CNXVPN1-P2) SEND phase 2 Quick Mode
[SA] [KEY] [ID] [HASH] [NONCE]
122626 Default RECV Informational [HASH] [NOTIFY] with INVALID_ID_INFORMATION error
122626 Default RECV Informational [HASH] [DEL]
122626 Default CNXVPN1-P1 deleted
    
```

If you have an « INVALID ID INFORMATION » error, check if « Phase 2 » ID (local address and network address) is correct and match what is expected by the remote endpoint.

Check also ID type (“Subnet address” and “Single address”). If network mask is not check, you are using a IPV4_ADDR type (and not a IPV4_SUBNET type).

4.7 I clicked on “Open tunnel”, but nothing happens.

Read logs of each VPN tunnel endpoint. IKE requests can be dropped by firewalls. An IPSec Client uses UDP port 500, UDP port 4500 and protocol ESP (protocol 50).

4.8 The VPN tunnel is up but I can't ping !

If the VPN tunnel is up, but you still cannot ping the remote LAN, here are a few guidelines:

- Check Phase 2 settings: VPN Client address and Remote LAN address. Usually, VPN Client IP address should not belong to the remote LAN subnet
- Once VPN tunnel is up, packets are sent with ESP protocol. This protocol can be blocked by firewall. Check that every device between the client and the VPN server does accept ESP
- Check your VPN server logs. Packets can be dropped by one of its firewall rules.
- Check your ISP support ESP

Doc.Ref	tgvpn_ug_VRT-311S_en
Doc.version	1.0 –october.2006
VPN version	4.0

- If you still cannot ping, follow ICMP traffic on VPN server LAN interface and on LAN computer interface (with Ethereal for example). You will have an indication that encryption works.
- Check the “default gateway” value in VPN Server LAN. A target on your remote LAN can receive pings but does not answer because there is a no “Default gateway” setting.
- You cannot access to the computers in the LAN by their name. You must specify their IP address inside the LAN.
- We recommend you to install ethereal (<http://www.ethereal.com>) on one of your target computer. You can check that your pings arrive inside the LAN.

	Doc.Ref	tgvpn Ug_VRT-311S_en
	Doc.version	1.0 –october.2006
	VPN version	4.0

5 Contacts

News and updates on TheGreenBow web site : <http://www.thegreenbow.com>

Technical support by email at support@thegreenbow.com

Sales contacts at +33 1 43 12 39 37 ou by email at info@thegreenbow.com